


## Welcome to your Case Communications 6944 Router

 
### 1. Check the Contents of the 6944 package

If any items are missing please contact Case Communications or their local partner

#### A) Standard Equipment

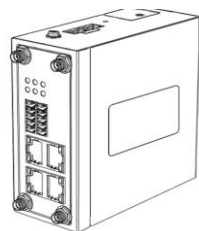

6944 Router



Power Supply  
Terminal Block




Serial & DIDO  
Terminal Block



Ethernet  
Cable

#### B) Optional Items

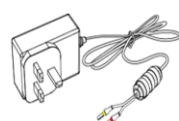

Power  
Adapter



Cellular  
Antenna x 2



 
Cellular  
Antenna x 2



Wi-Fi  
Antenna x 2




Wi-Fi  
Antenna x 2



DIN Rail  
Mounting  
Kit


#### C) Other items which will be required

 

SIM Card



Philips Screwdriver

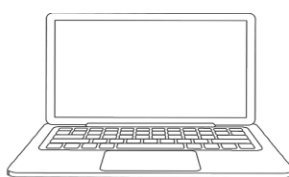


PC

### 3. Powering up the 6944

#### A) Power up the 6944


1. Connect a PC to the 6944 LAN Port using the Ethernet Cable
2. Connect the AC Power Adapter to the AC Power Source
3. The router will boot up and self test when ready the 'SYS' light will blink

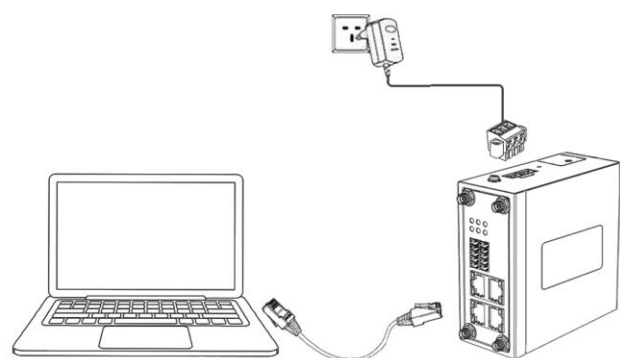

### 4. Accessing the web page


#### A) Setting the PC IP Address

1. The default IP Address of the router is 192.168.5.1/24
2. Either set your PC to an IP Address on the same network or set it to obtain an IP Address from the 6944

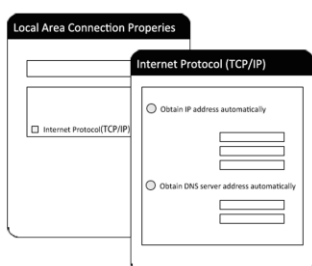

#### B) Log in to the 6944


1. Enter 192.168.5.1 into your browser
2. Use the default user name of 'admin'
3. Use the default password of 'admin'

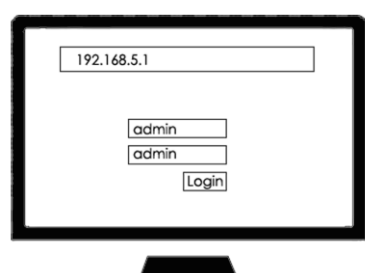

### 2. Preparing the 6944


#### A) Install the SIM card

1. Using a Phillips screwdriver remove the SIM slot cover
2. Select the SIM card (s) into the SIM Sockets
3. Replace the SIM Slot Cover

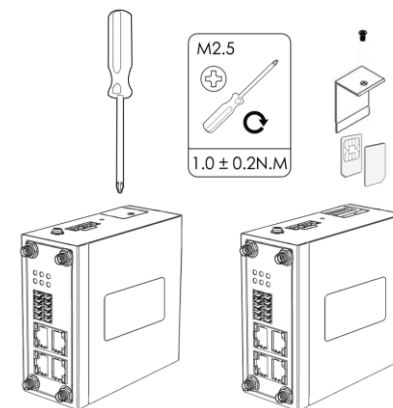


#### B) Install Power Terminal Block

1. Remove the power connector from the unit and loosen the screws for the locking flanges as required
2. Connect the power supply wires to the terminals

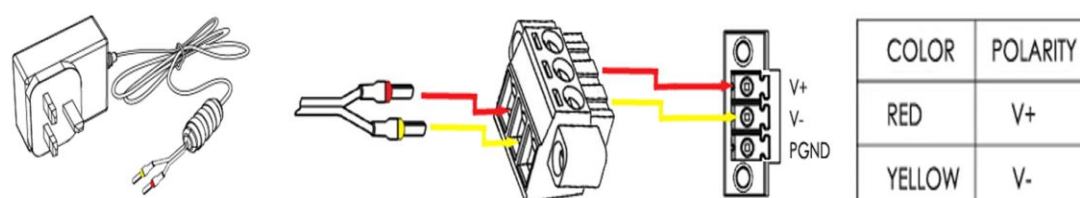

#### C) Install Cellular and Wi-Fi Antenna

1. Connect the cellular antenna to the Main and Aux connectors on the 6944

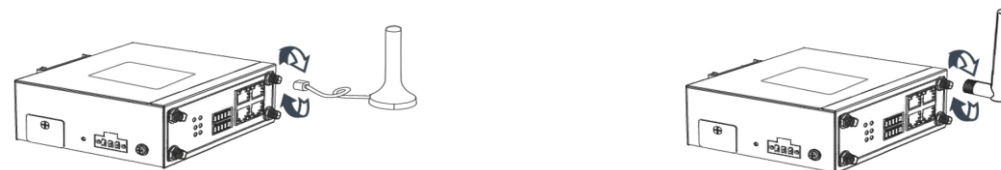



2. Connect the Wi-Fi Antenna to the Wi-Fi Connectors on the 6944



### 5. Mounting the 6944 on the DIN Rail

#### A) DIN-rail installation

1. Use 4 x M3 x 6 Phillips screws to fix the DIN Rail to the 6944
2. Insert the upper lip of the DIN Rail mount onto the top of the DIN Rail
3. Press the 6944 down onto the DIN-rail until it snaps into place

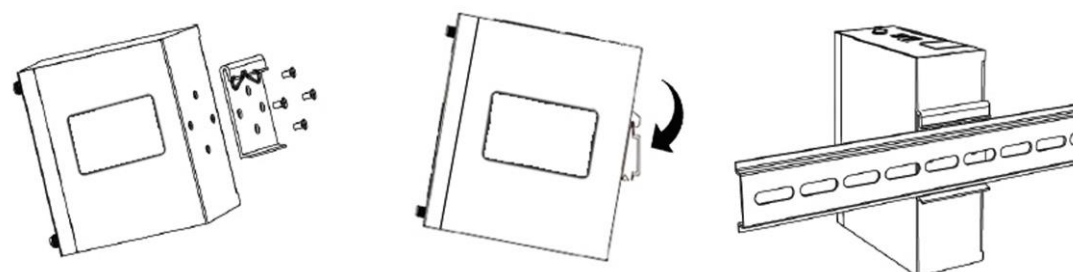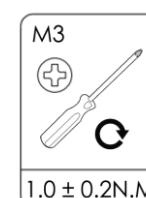

For additional information, please contact  
 Email: [admin@casecomms.com](mailto:admin@casecomms.com)  
 Tel: +44 (0) 01494 880 240  
 Web: [www.casecomms.com](http://www.casecomms.com)